



# 1080P Search Camera System

## **Quick Start Guide**

#### Version 1:

#### Version 2:

> Waterproof IP68

> Audio Monitoring





#### Note:


It is sound default.Press (a) to mute. Press (a) again, Speaker sounds.

0

#### Stretch and Retract Telescopic Pole

- ➤ Stretch the cable, anti-clockwise loosen the loose collars one by one to stretch the pole. Then clockwise fasten the loose collars.Retract the pole:
- ➤ Anti-clockwise loosen the loose collars one by one, then pull out the cable in end of the pole to retract the pole. Clockwise fasten the loose collars.




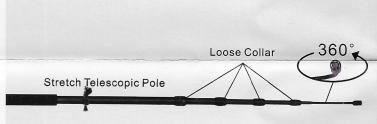

Record & Photo


- ➤ Under"" mode, press" DVR starts to record, and screen shows "●", press "@" again to end record.
- > Under " mode, press " once, screen flashes once, and get one picture.

ATTENTION: Do remember to insert the TF card.

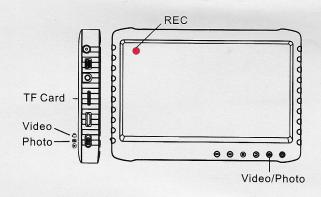


# Playback Video/Photo

- ➤ Under "mode, Press" """ "to select the video files or photos, press" "o playback video or photos.
- ➤ Press "②"to exit.

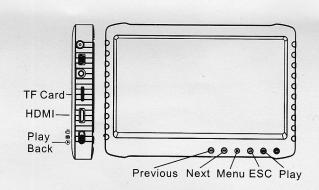


#### Install the 7" DVR

- ➤ Aim the nut at the insert bolt on the pole, fasten Bolt with Chain. Fix the direction & angle by adjusting Bolt 2 & 3.
- > Catch the 5 pin connector to plug it into DVR female slot, then fasten the nut; When pull it out, just loosen it.

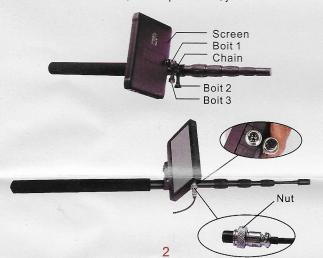

## Power On/Off & Charge


- ➤ Connect data cable first thenpress "②" to turn on the DVR. press "②" 3 seconds to power it off.
- ➤ When low battery indicator appears, please use the DC12V AC adapter or USB 5V to charge it. Note: (If system halted, please reset it)

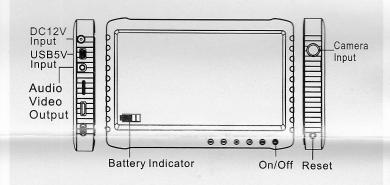

3

## Turn On/Off LED lights

> Press "◎ " to turn on LED lights, screen icon "♣" on. > Press "◎ " again to turn off the LED lights, screen icon"♣" off.

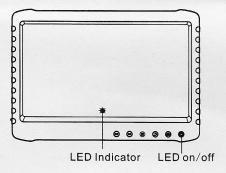

## **Fuction Settings**

➤ Under"♣"mode,press"♠",to enter into function setting.Press ♠"/♠ "to select "function" press ♠" to confirm and exit.

